

# ***HDM Performance Parts 218 Husting Lane Benton, Kentucky 42025***

## **Foam Air Filter Oiling Instructions** August 2003

Please read the following instructions carefully to achieve maximum engine protection and performance.

### **Filter Oiling Instructions:**

Remove the filter frame (if applicable) and saturate the foam element with Foam Filter Oil (preferably UNI Brand).

**Liquid Oil:** Pour into pan or tub, and dip the filter until there is complete coverage with oil. Next squeeze out all you can...(do not wring out) then dab filter with paper towels to remove excess oil. If your filter has a rubber flange, be sure to clean mounting surface free of oil.

**Aerosol Filter Oil:** Spray the filter inside and out until the filter has complete coverage with oil. Next work the oil into the foam using your hands. Repeat this step once more, and then dab filter with paper towels to remove excess oil. If your filter has a rubber mount flange, be sure to clean the mounting surface free of oil.

Clean filter frame, clean filter mounting surface and air box. Check air boot and mount to carburetor. Next reinstall filter frame (if applicable) back into the filter element.

For more information check our website or email me us.

[www.hdmworld.com](http://www.hdmworld.com)

[hdm@hdmworld.com](mailto:hdm@hdmworld.com)